
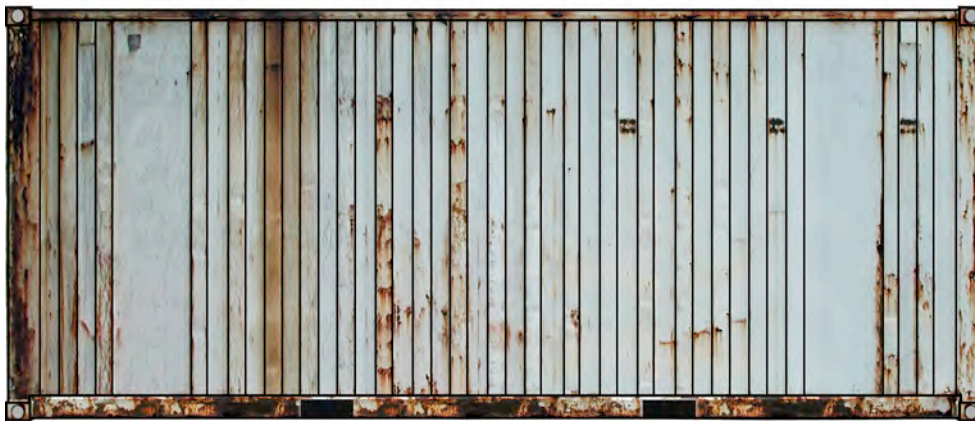


O scale (1:48) 20' Container

© 2011, for non-commercial use only from CaneSIG: www.zelmeroz.com/CaneSIG

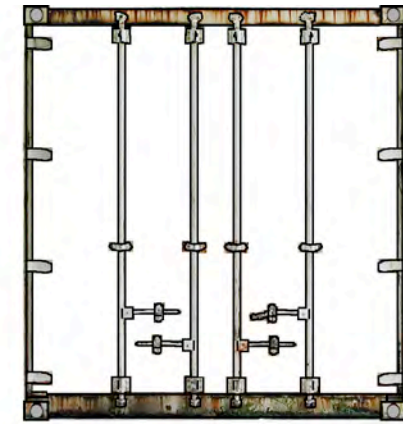

Carefully cut outside frame from plain end and sides, then cut vertical panels to apply to base layer for 3D effect. Apply outside frames before applying vertical panels. Corners need to be carefully formed as the only corner cover is the top and bottom lift blocks.

Apply top frame after assembling into an open-bottom box and corner lift blocks as last step.



0 scale (1:48) 20' Container

© 2011, for non-commercial use only from CaneSIG: www.zelmeroz.com/CaneSIG