



two layers laminated and formed to fit ends (make a former)

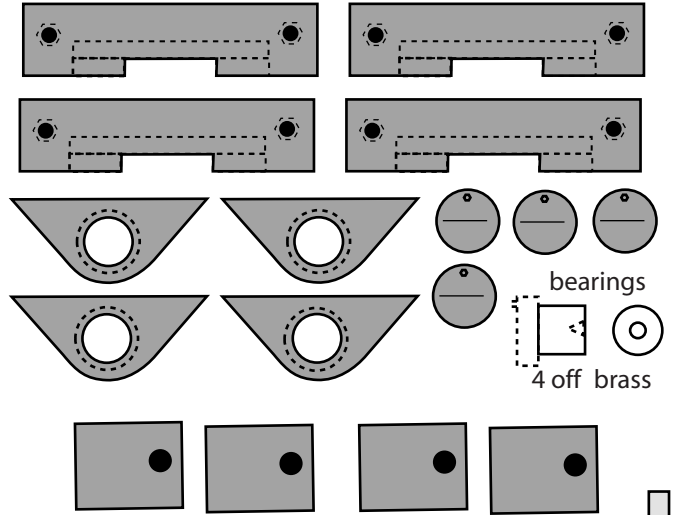

bearings  
4 off brass

two layers with thin sheet lead or heavy metal between to add weight to chassis

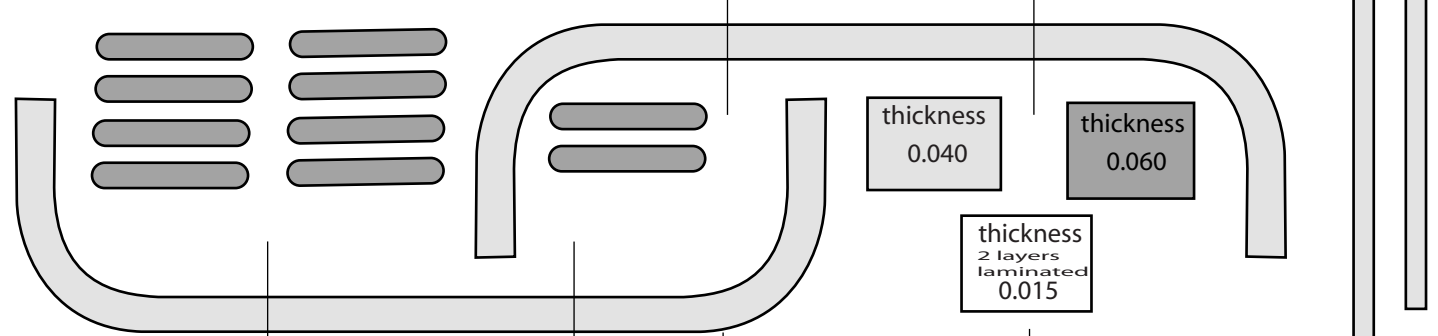

thickness  
0.040

thickness  
0.060

thickness  
2 layers  
laminated  
0.015

### Ruston Tipper Parts

